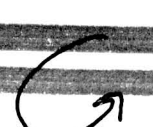


* Mitsubishi Software

MT-CR44/1.6V

* Crank sensor spins -

~~Input trig + pos~~  ~~anti~~ clockwise

Input trig - neg  clockwise

* Minac V6 input trigger = +POS

1 & 4 - Grey / Red

2 & 5 - Grey / Blk

3 & 6 - Grey / White

Green
on 602 +
plug var

