


ENGINE MANAGEMENT SYSTEM

FIRING ORDER - 1 5 3 6 2 4

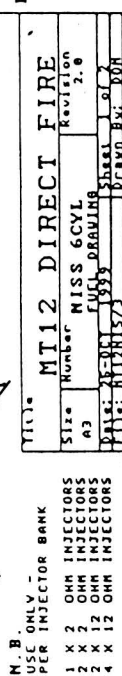

N. B. -
USE ONLY -
PER INJECTOR BANK